


FURUNO FMD-3x00: HOW TO DISABLE THE CHARTS SYNCRONIZATION

1. Go to CHARTS -> System

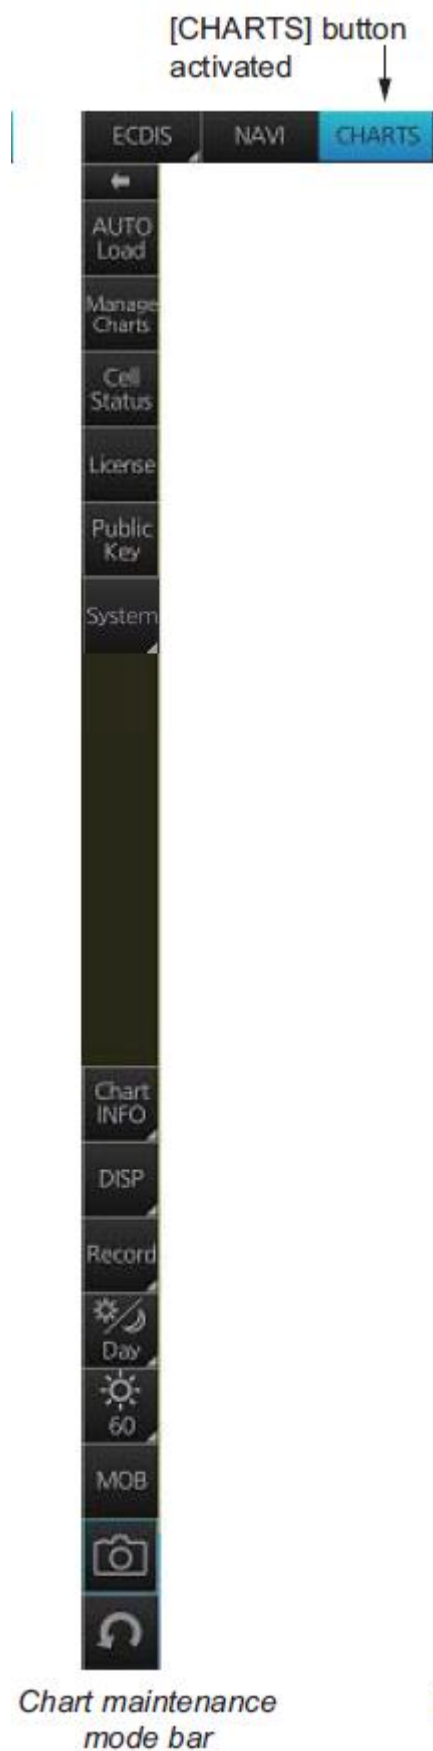

2. Go to [Sync Config]


Make sure that no units are under “Grouped with This Unit:”

The ECDIS must be under the {Not Synchronize with this Unit:} to disable the synchronization, like below:



Click close to close this window

3. Go to [Sync Status] to check the synchronization status

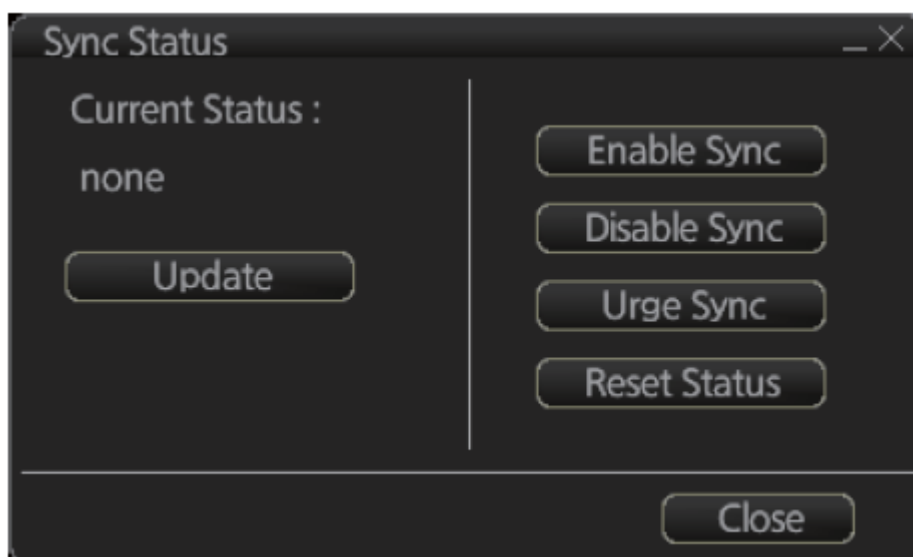

Under the Current status: it should indicate Disabled.

If not then click [Disable Sync]

“Do you want to disable Sync?” -> OK

4. After the synchronization has been disabled, please delete everything and then re-import the permit file and the ENC etc.
5. If there's still a message “corrupted SENC...” then got to : CHARTS -> System -> Reconvert
This action will take time because it reconverts all SENC charts